

INDEX

- 2 GET TO KNOW YOUR MACHINE
- 3 INSTALLATION
- 4 WASHING
- 6 DRAINING
- 7 RINSING
- 9 SPIN DRYING
- 10 PRECAUTIONS
- 11 AFTER USE
- 12 MAINTENANCE
- 13 HELP
- 14 DEFY SERVICE CENTRES
- 15 WARRANTY
- 16 SPECIFICATIONS



You can rely on Defy

OWNER'S MANUAL




TWINMAID 920

www.defy.co.za


Getting to know your machine

You are now the proud owner of one of the finest and most modern washing machines that today’s technology can produce. You are going to make a great team together. But first it will pay if you really get to know each other. This book will tell you all you need to know about your machine, what it will do and how to do it. Please read all the instructions carefully before operating the machine .

 
The control panel

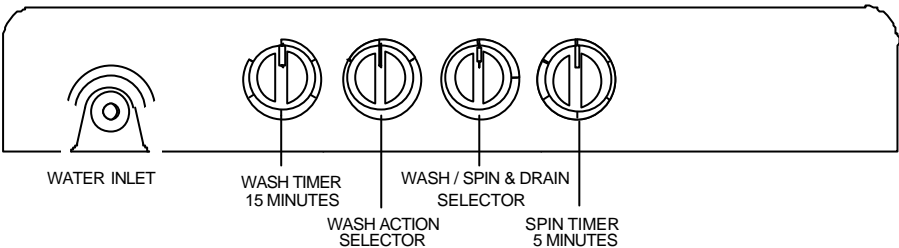


The wash and spin tubs

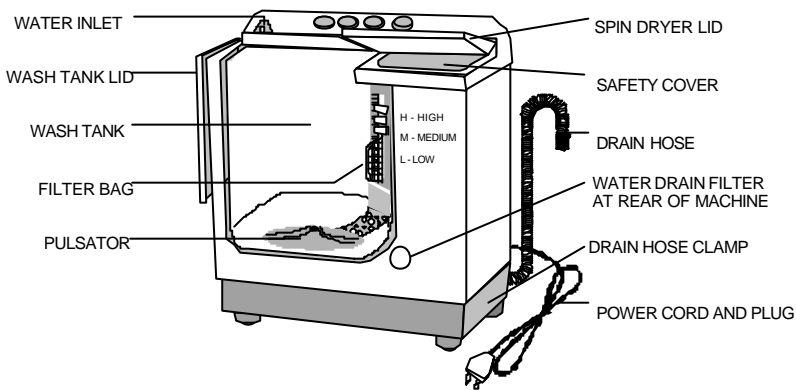 

Accessories

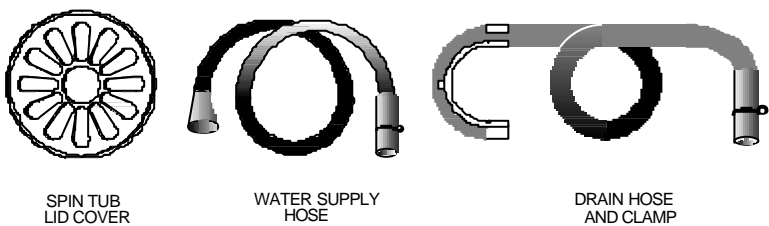 


INSTALLATION

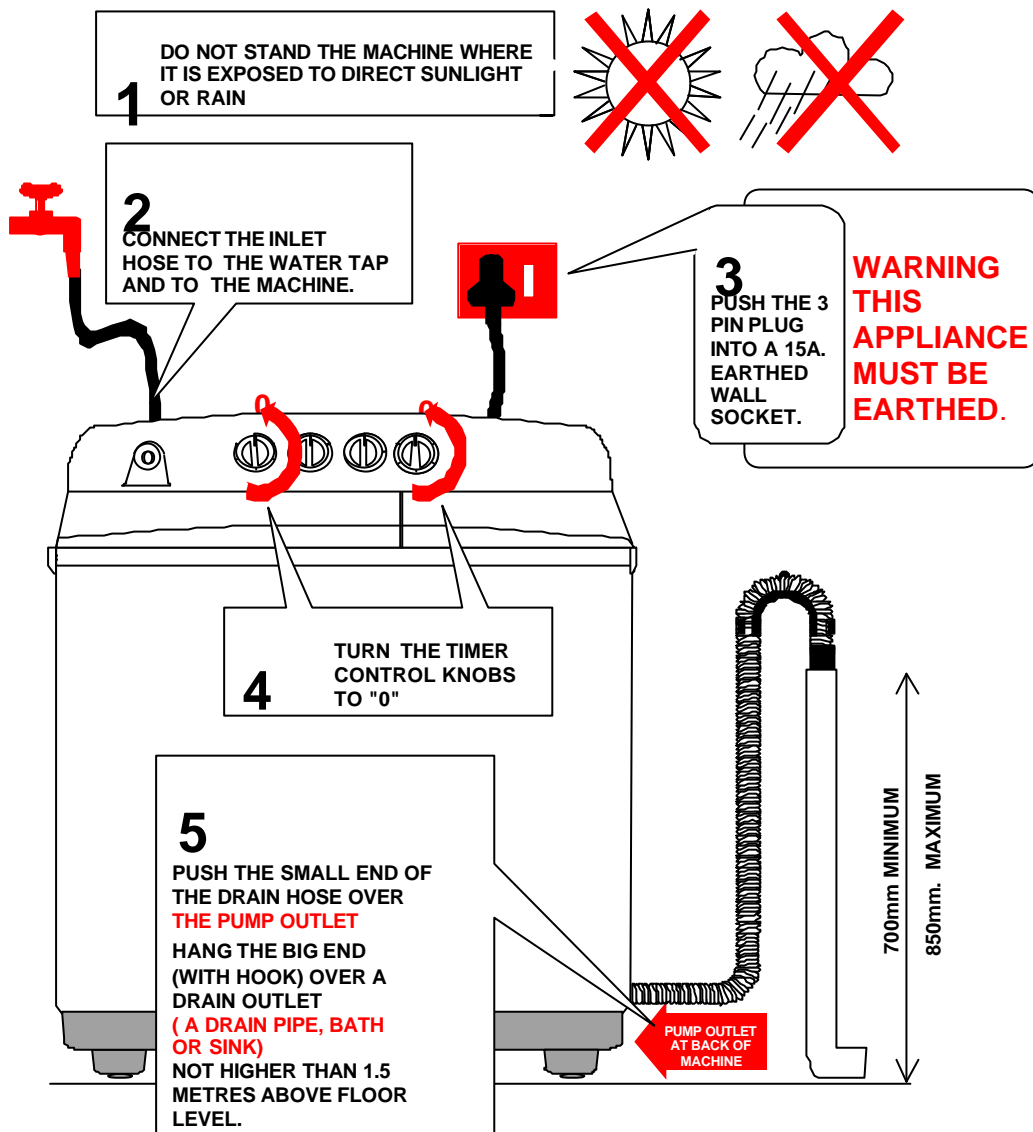 

THE MACHINE MUST STAND ON A LEVEL SURFACE

 
WASHING

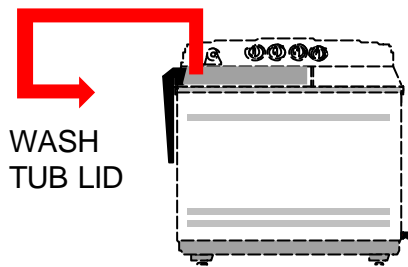


1 REMOVE WASH TUB LID AND HANG IT ON THE SIDE OF THE MACHINE



 2 SWITCH ON THE POWER AT THE WALL SOCKET

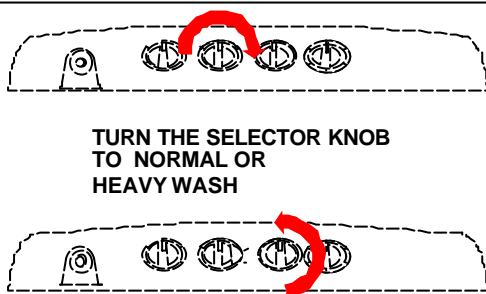


3 TURN THE SELECTOR KNOB TO WASH / SPIN

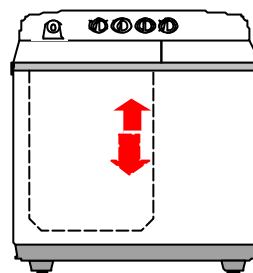 


H - HIGH
M - MEDIUM
L - LOW

 4 FILL TO THE DESIRED WATER LEVEL DEPENDING ON THE SIZE OF THE WASH LOAD

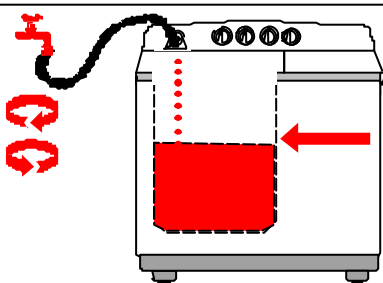


 5 OPEN THE TAP AND FILL THE WASH TUB WITH WATER TO THE DESIRED WATER LEVEL. THEN CLOSE THE TAP.

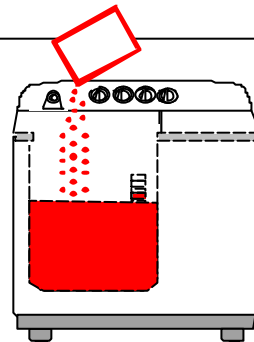


6 ADD SOAP POWDER AS DIRECTED. USE ONLY DETERGENT DESIGNED FOR TWIN TUB WASHING MACHINES.

 WASHING Continued.

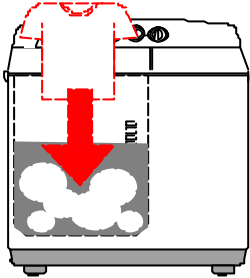

7 PLACE THE WASHING IN THE TUB
ONE ARTICLE AT A TIME




TURN THE WASH TIMER KNOB
TO THE DESIRED TIME.

GENTLE WASH	- SYNTHETICS, WOOL, SILK	2-5 MIN
NORMAL WASH	- COTTON, LINEN	5-15 MIN
HEAVY WASH	- VERY DIRTY WASHING	9-15 MIN




 9 THE WASHING MACHINE WILL START
WASHING AS PER THE SELECTED
TIME AND WASH PROGRAMME

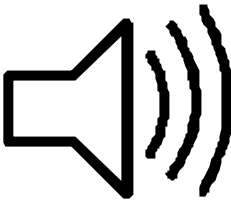

10

 NOTE
15 SECONDS BEFORE COMPLETION
OF THE WASH, AN ALARM BUZZER
WILL SOUND TO REMIND THE USER
THAT THE WASH CYCLE IS NEARLY
COMPLETE

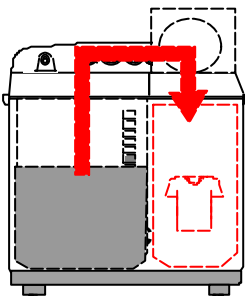

11 AFTER THE WASHING IS COMPLETE,
REMOVE THE WASHING FROM THE
WASH TUB AND PLACE IT IN THE
SPIN DRUM

WARNING



 
IMPORTANT
NEVER TURN A KNOB
FURTHER THAN THE MARKING ON THE DIAL
TURN ANTI CLOCKWISE TO RETURN TO "0"

DRAINING



11


**IF REQUIRED, ANOTHER LOAD MAY BE WASHED IN THE SAME SOAPY WATER..
IF NOT, THE MODE SELECTOR KNOB SHOULD BE TURNED TO DRAIN**

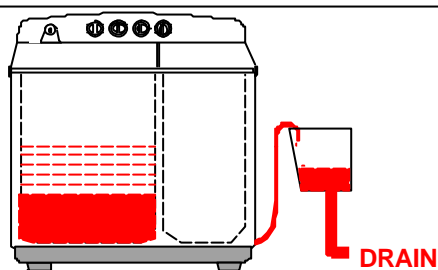

12


THE SOAPY WATER WILL DRAIN FROM THE MACHINE

 WARNING

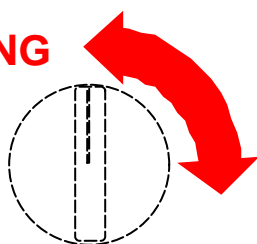

**IMPORTANT
NEVER TURN A KNOB
FURTHER THAN THE MARKING ON THE DIAL
TURN ANTI CLOCKWISE TO RETURN TO "0"**

 
RINSING

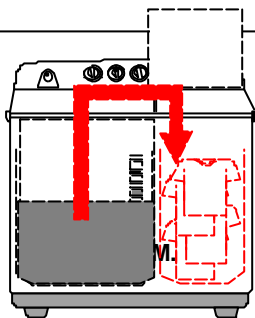

1 PLACE THE WET WASHING IN THE SPIN DRUM, DISTRIBUTING IT EVENLY



 
2 PUSH THE WASHING DOWN GENTLY INTO THE SPIN DRUM AND PLACE THE DISC COVER IN THE DRUM SO THAT IT COMPLETELY COVERS THE WASH LOAD

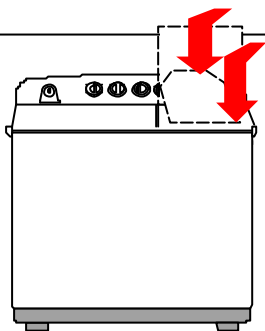


3 CLOSE BOTH THE INNER AND OUTER LIDS OF THE SPIN TUB



 4 TURN THE SPIN TIMER KNOB TO APPROXIMATELY 2 MINUTES

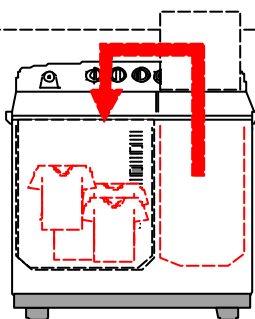


 5 REMOVE THE WASH LOAD FROM THE SPIN DRUM AND PLACE IT IN THE EMPTY WASH TUB

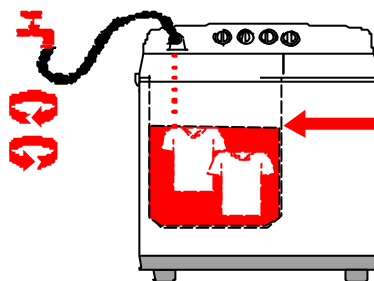


6 OPEN THE TAP AND FILL THE WASH TUB WITH WATER TO THE DESIRED LEVEL THEN CLOSE THE TAP

 RINSING Continued




NORMAL

7 TURN THE SELECTOR KNOB TO NORMAL




8 TURN THE WASH TIMER KNOB TO THE REQUIRED TIME FOR RINSING.

DELICATE RINSE	- SYNTHETICS,WOOL,SILK	2-5 MIN
NORMAL RINSE	- COTTON ,LINEN	5-15 MIN
HEAVY RINSE	- HEAVY ROBUST FABRICS	9-15 MIN



 DRAIN

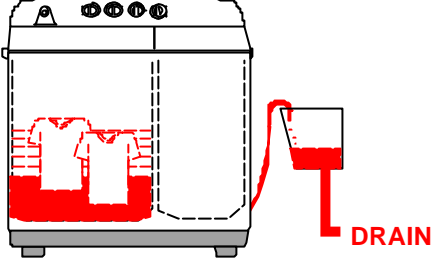

DRAIN

9 AFTER RINSING TURN THE MODE SELECTOR TO DRAIN
THIS WILL DRAIN OFF THE RINSE WATER

SPIN DRYING

1

PLACE THE WET WASHING IN THE SPIN DRUM, DISTRIBUTING IT EVENLY

2

PUSH THE WASHING DOWN GENTLY INTO THE SPIN DRUM AND PLACE THE DISC COVER IN THE DRUM SO THAT IT COMPLETELY COVERS THE WASH LOAD

FAILING TO PLACE THE DISK COVER INTO THE SPIN DRUM COULD CAUSE THE CLOTHING TO RISE OUT OF AND GET ENTANGLED ROUND THE DRUM

3

CAUTION

EVENLY DISTRIBUTE WET WASHING IN THE SPIN DRUM. AN OUT OF BALANCE LOAD COULD DAMAGE THE SPIN TUB.

4

CLOSE BOTH THE INNER AND OUTER LIDS OF THE SPIN TUB

5

TURN THE SPIN TIMER KOB TO THE DESIRED SPIN TIME

RECOMMENDED SPIN TIMES	
DELICATE FABRICS AND SYNTHETICS	1 MINUTE
WHITES COTTON AND LINEN	2 TO 4 MINUTES
HEAVY FABRICS COTTON	3 TO 5 MINUTES

 
PRECAUTIONS

1




DO NOT TOUCH THE SPIN DRUM WHEN IT IS ROTATING

2

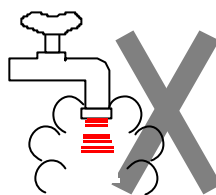

DO NOT USE WATER HOTTER THAN 55°C.
VERY HOT WATER COULD DAMAGE
PARTS OF THE MACHINE

 3

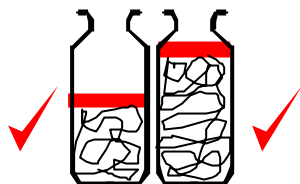

IMPORTANT

 
ALWAYS USE THE SPIN TUB DISC COVER
AS THIS PREVENTS CLOTHING FROM
RISING OUT OF THE SPIN TUB

4




DO NOT MACHINE WASH CLOTHES SOAKED
IN PETROL, THINNERS, PARAFFIN OR ANY
OTHER FLAMMABLE LIQUIDS

5

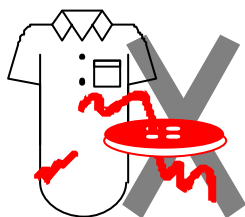

CHECK ALL CLOTHES FOR LOOSE
BUTTONS AND TEARS
CHECK POCKETS FOR COINS, PINS ETC.

 6

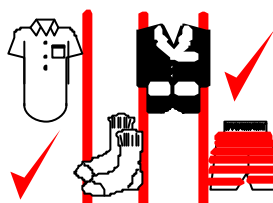


SORT AND SEPARATE CLOTHES BY
FABRIC, COLOUR AND DEGREE OF DIRT

7



USE ONLY SOAP POWDERS SPECIALLY
DESIGNED FOR TWIN TUB WASHING
MACHINES

 8

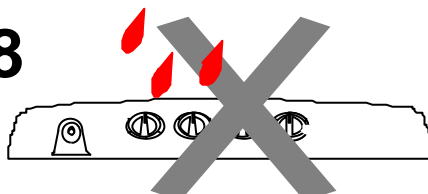


DO NOT SPLASH WATER OVER THE
CONTROLS AS THIS COULD LEAD TO AN
ELECTRICAL PROBLEM

IMPORTANT

NEVER TRY TO TURN A KNOB FURTHER THAN THE MARKING ON THE DIAL
TURN ANTI CLOCKWISE TO RETURN THE KNOB TO "0"

 AFTER USE

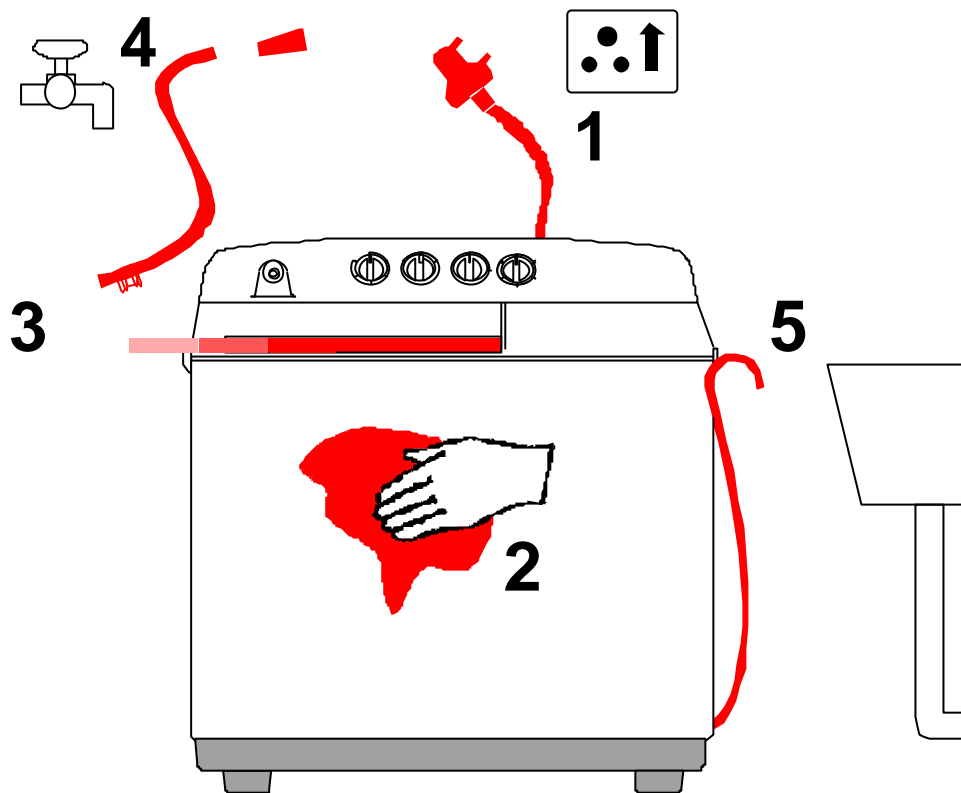

NEVER TOUCH THE ELECTRICAL PLUG OR SOCKET WITH WET HANDS

- 1 SWITCH THE POWER OFF AT THE WALL SOCKET AND REMOVE THE PLUG FROM THE SOCKET.**
- 2 DRY THE CABINET, THE CONTROL PANEL AND INSIDE THE TUBS WITH A SOFT, LINT FREE CLOTH.**
- 3 PLACE THE WASH TUB LID IN POSITION OVER THE WASH TUB.**
- 4 IF YOU WISH TO MOVE THE MACHINE, FIRST UNCOUPLE THE INLET HOSE FROM BOTH THE TAP AND THE MACHINE.**
- 5 REMOVE THE OUTLET HOSE FROM THE DRAIN BUT DO NOT DETACH THE OUTLET HOSE FROM THE MACHINE.**

MAINTENANCE



CLEANING THE LINT FILTER

PERIODICALLY, THE FILTER BAG REQUIRES CLEANING. PRESS THE CATCH DOWNWARDS AND PULL THE FILTER OUT. RINSE CLEAN UNDER RUNNING WATER AND REPLACE.



CLEANING THE CABINET

WIPE THE CABINET WITH A DAMP SOAPY CLOTH. RINSE AND WIPE DRY.

DO NOT USE HOUSEHOLD CLEANERS, ABRASIVES OR VOLATILE LIQUID CLEANERS

 


IMPORTANT

IF THE POWER CORD SHOULD EVER NEED REPLACING, USE ONLY A GENUINE REPLACEMENT PART AVAILABLE FROM DEFY SERVICE CENTRES

CLEANING THE FILTER

REGULARLY CLEAN THE DRAIN FILTER ,LOCATED AT THE REAR OF THE MACHINE

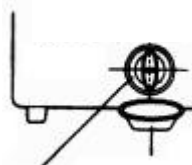

Place a shallow container under drain to collect any residual spillage



 
Turn the filter cap in an in an anticlockwise direction



Pull the filter assembly out.



Clean the drain filter.

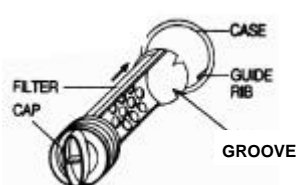


Re-fit the filter guides ensuring that the groove in the filter aligns with the guide rib



Tighten the cap by turning in a clockwise direction

HELP

 IF YOUR MACHINE WILL NOT WORK,
CHECK THE FOLLOWING BEFORE CALLING A SERVICE TECHNICIAN

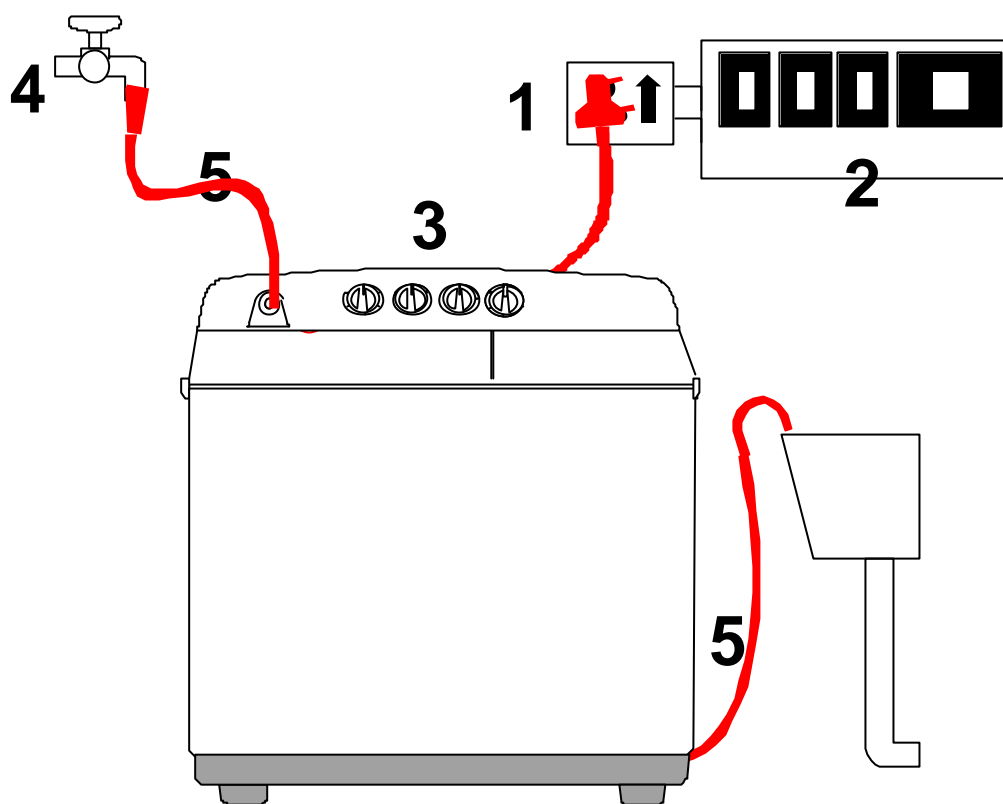

- 1 IS THE PLUG IN THE WALL SOCKET AND HAS THE POWER BEEN SWITCHED ON?
- 2 HAS A HOUSE FUSE BLOWN OR HAS A CIRCUIT BREAKER TRIPPED?
- 3 ARE THE CONTROL KNOBS IN THE CORRECT POSITION?
- 4 HAS THE WATER TAP BEEN TURNED OPEN?
- 5 HAS AN INLET OR OUTLET HOSE BEEN KINKED, TWISTED OR BENT?
- 6 HAVE THE FILTERS BEEN CLEANED?
- 7 CHECK FOR CLOTHES ENTANGLED ROUND THE SPIN DRUM.
- 8 HAS THE SPIN TUB LID BEEN CLOSED PROPERLY?

IF YOU HAVE FOLLOWED THE INSTRUCTIONS AND STILL HAVE A PROBLEM,
CONTACT THE NEAREST DEFY SERVICE CENTRE.
THEY WILL BE ABLE TO HELP OR SEND A FACTORY TRAINED TECHNICIAN
TO ASSIST YOU.

Service Centres

If you have followed the instructions and still have a problem, contact the nearest Defy Service Centre. They will be able to advise you on any aspect of the machine or send a qualified technician to repair it.

BLOEMFONTEIN

P.O.Box 1691 Bloemfontein. 9300. 160 Long Street, Hilton. Bloemfontein
Tel. 051 400

CAPE

P.O.Box 953 Milnerton. 7435 5A Marconi Rd.
Gardens, Milnerton
Tel. 021 551

DURBA

P.O.Box 12004 Jacobs 4026. 135 Teakwood Rd. Jacobs
Tel. 031 460

EAST

P.O.Box 7006 East London 5200. 16 Bowls Rd. Arcadia East
Tel. 043 743

JOHANNESBURG

P.O.Box 27150 Benrose 2011. Cnr. Mimetes & Kruger Sts. Denver ext.12
Tel. 011 621
Tel. Sales, Administration, Distribution, Commercial Head
National Groups, Contracts and

PIETERSBURG

P.O.Box 1719 Pietersburg 0700. 87 Hoof Str. Superbia
Tel. 0152 92 1166 / 7 / 8 /

PORT

P.O.Box 2971 North End 6056. 204 Kempston Rd. Port
Tel. 041 401

PRETORIA

P.O.Box 19768 Pretoria West 0117. Block A3 Old Mutual
Cnr. D.F.Malan Rd. & Moot Str. Hermanstad.
Tel. 012 377

OWNER'S MANUAL

SPECIFICATIONS

POWER SOURCE AC 230 V
FREQUENCY 50Hz

POWER CONSUMPTION
WASH MOTOR 400W
SPIN MOTOR 180W
PUMP 30W

EXTERNAL DIMENSIONS
HEIGHT 1010mm.
WIDTH 880mm.
DEPTH 540mm.

NETT WEIGHT 40.5 Kg.

WATER CAPACITY
HIGH 72 LITRES
MEDIUM 63 LITRES
LOW 54 LITRES

CAPACITY 9kg

MAINS CABLE TYPE Y



You can rely on Defy



TWINMAID 920

The Manufacturer strives for continuous improvements.

For this reason, the text and illustrations in this book are subject to change without notice.